


How to fit new Premiere Spindles & Rollers

HEN0190

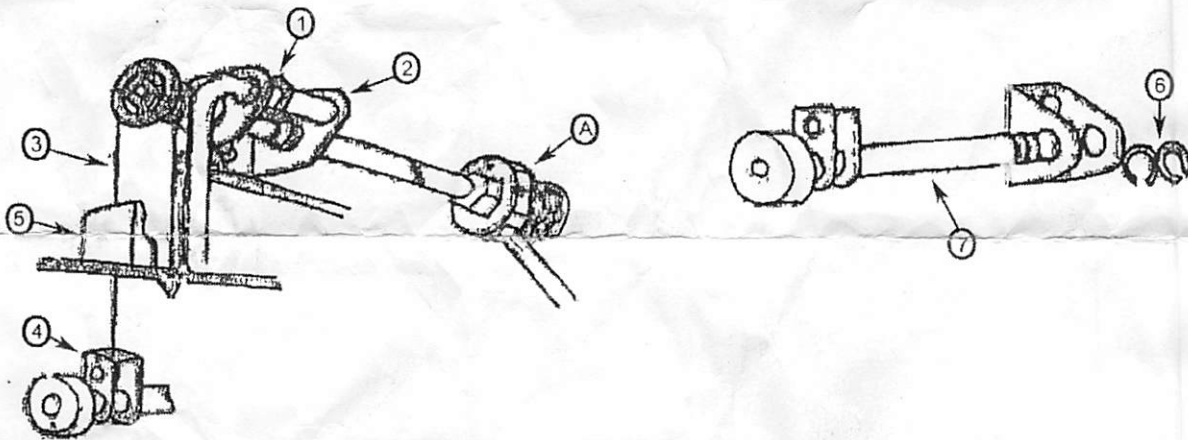

Using toggle bar or screwdriver in plug A rotate shaft to ease spring tension and insert crook pin (1) into left hand head bracket (2) and remove/unclip cable (3) from roller spindle clips (4).

Secure door in position and remove jamb channels (5).

Remove both cir-clips (6) from each roller spindle (7) and withdraw roller spindle.

Replace with new roller spindles (7) and cir-clips (6).

Refit jamb channels in position and clip cables into new roller spindle clips (4) ease spring tension using toggle bar and remove crook pin (1).

Allow spring to take up slack, ensuring that cables are in the outer groove and run down behind the cone and that roller spindle clips (4) are in position as shown.