


How to fit new Roller Spindles to your garage door


GAR0180

- 1) Care must be taken to ensure cable is removed from the spindle (see instruction 2) before attempting to disconnect link arm bracket.
- 2) Pull cable across the door in the direction of the arrow. Ensure that the cable is snugly bedded in the grooves of both pulley wheels. Pull the cable until the retaining bracket at the end of the spring is engaged in its socket. (It is recommended that a piece of cloth is used between the cable and hand). Some assistance may be required using the free hand to engage.

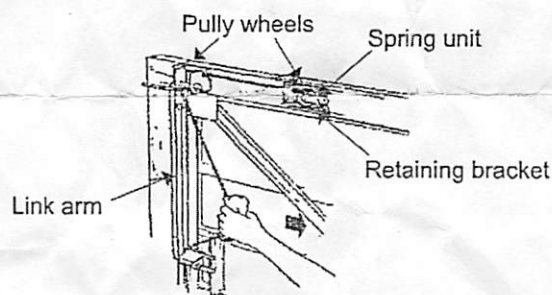


Warning - It is important that this instruction is followed correctly as damage to cable or loss or pre-tension could occur.

- 3) Loosen the side track to enable spindle to be removed - re-position after fitting new part.

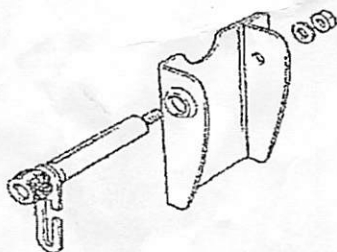

- 4) Attach eye at the end of the cable to hook on the roller spindle.
- 5) Take up the slack wire by pulling cable across the door in the direction of the arrow. Ensure that the cable is snugly bedded in the grooves of both pulley wheels. Pull the cable until the retaining bracket at the end of the spring is released from its socket (it is recommended that a piece of cloth is used between the cable and hand). Some assistance may be required using the free hand to the retaining bracket in its socket. Lightly pull the retaining bracket clear of its socket should it not completely release.

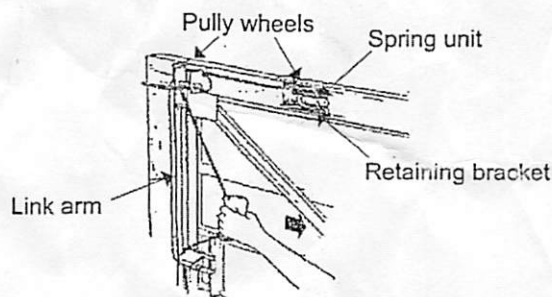

Warning - It is important that this instruction is followed correctly as damage to cable or loss or pre-tension could occur.